



WINDOW

SIMPLY REVOLUTIONARY™

OPERATING MANUAL

H WINDOW PRODUCTS


204 SERIES

Installation and Removal of Insect Screen

1.) Make sure screen plug is installed in frame mounting holes. (A)



2.) Open screen clips on screen frame and insert screen into window frame. (B)

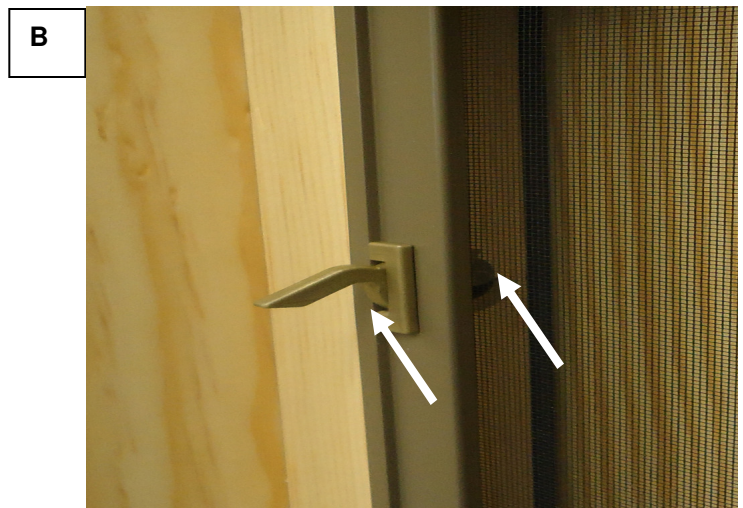

3.) Latch clips onto screen plugs by pushing lever down. (C)




4.) Reverse procedure to remove screen.

WARNING: Insect screens are intended to provide reasonable insect control and are not intended to provide security or retain objects or persons from the interior.



Encore Crank Operation

- 1.) Release sash locks by sliding lever away from crank housing. (A)
- 2.) Lift crank handle from its resting position in the crank housing. (B)
- 3.) Rotate handle counter clockwise to open window. (C)
(DO NOT OVER CRANK TO FORCE OPENING PAST THE 4" LIMIT)
- 4.) Reverse procedure to close window.
(DO NOT OVER TIGHTEN CRANK HANDLE WHEN CLOSING WINDOW.)

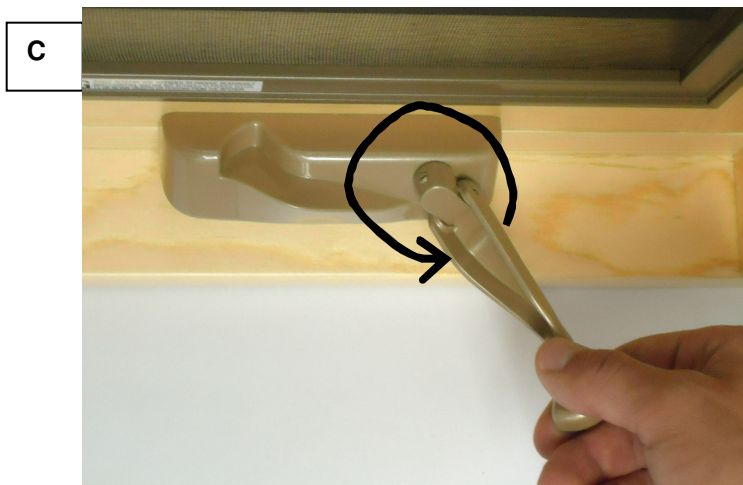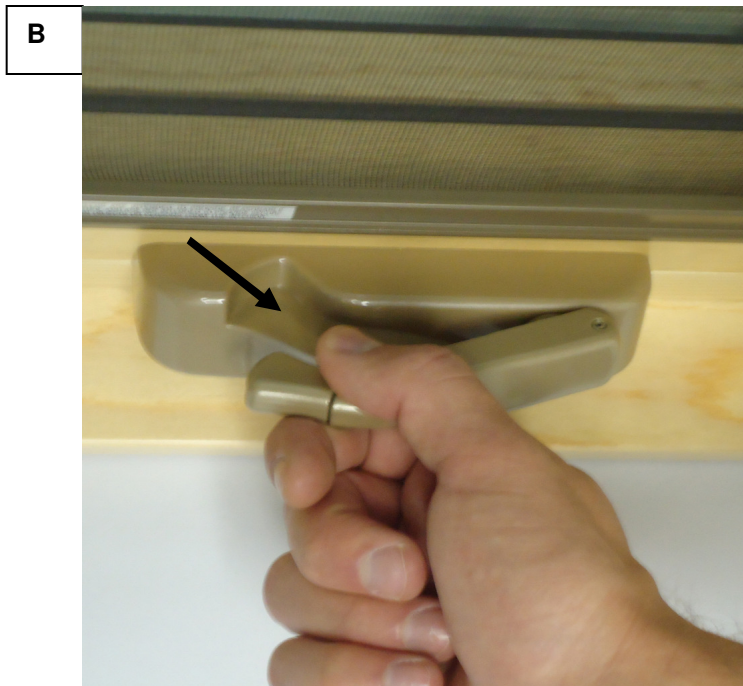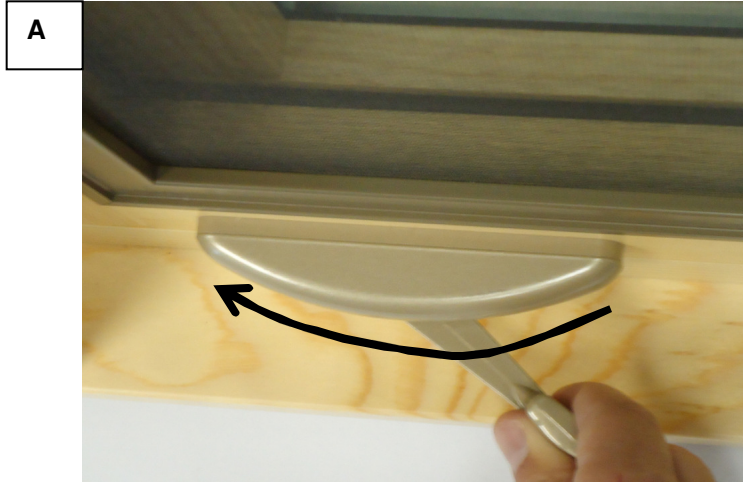

Operating Instructions Tilt-in Window Series 204 Windows

1. Window is locked when handle is in horizontal position. (A)
2. To disengage locks, rotate handle upwards until handle is pointing straight up in vertical position. (B)
3. Pull handle towards you to tilt window open to venting position. (Note: Window has opening limit of approximately 4") (C)
4. To close window, push sash firmly against frame. Hold pressure towards frame and turn handle back to the horizontal locked position.

A



B



C

